




COOKTOP PARTS

For Models: RS675PXGB9, RS675PXGQ9, RS675PXGT9
(Black) (White) (Biscuit)

30" DROP-IN
ELECTRIC OVEN
SELF CLEAN

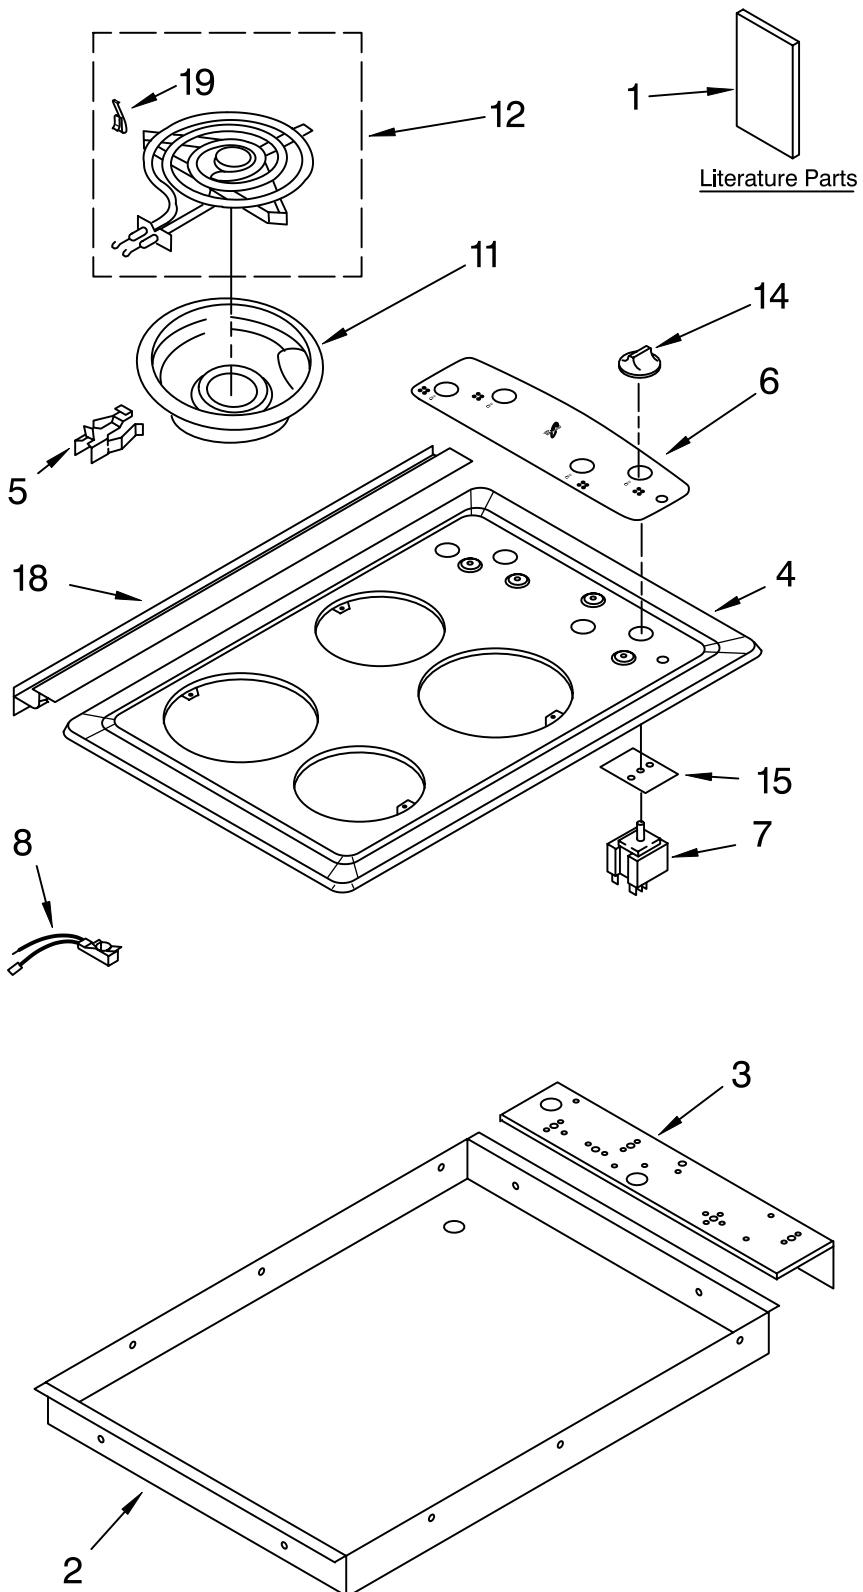

Illus.	Part No.	Part No.	DESCRIPTION
--------	----------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.


COOKTOP PARTS

1	LIT4455995	Literature Parts Installation Instructions
	LIT8300666	Use & Care Guide
	LIT3192845	Tech Sheet
	LIT3191638	Safe Cooking Tips
2	3192459	Burner Box
3	3192330	Bracket, Mounting
	3177991	Screw
4	8284709	Cooktop Biscuit
	3191168	White
	3191167	Black
5	3192575	Clip, Mtg. (4)
	3400843	Screw
6	8284707	Panel, Control Biscuit
	3191229	White
	3191228	Black
7	3191471	Switch, Infinite Use W/6" Surface (Blue Shaft)
	3191473	Use W/8" Surface (Red Shaft)
8	3400855	Screw, 8-32 x 1/4
11	3191491	Light, Indicator Pan, Surface
	3195208	6" Pan
	3195209	8" Pan
12	8053266	Element, Surface 6" Burner
	8053268	8" Burner
14	3196232	Knob, Control White
	8272506	Biscuit
	3196231	Black
15	3183956	Seal, Switch Shaft (4)
18	3192103	Trim, Extension White
	8300518	Biscuit
	3192102	Black
19	3195917	Clip, Element

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RS675PXGB9, RS675PXGQ9, RS675PXGT9
(Black) (White) (Biscuit)

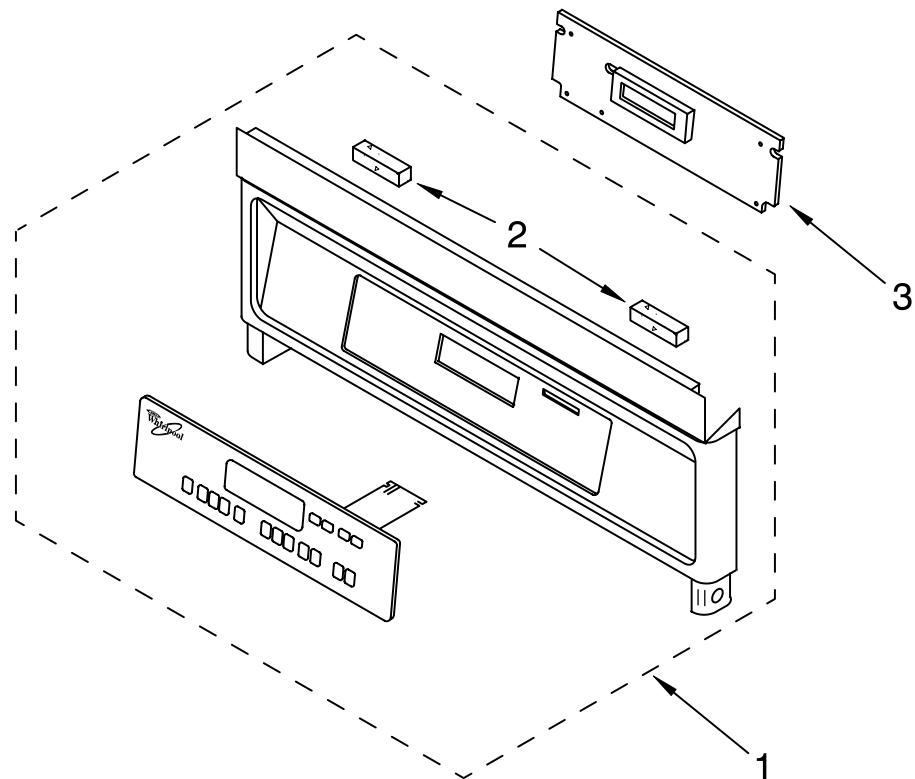


Illus. No.	Part No.	DESCRIPTION
1	4452845	Control Panel Assy. White
	8300515	Biscuit
	4452844	Black W/Membrane Switch
2	3400832	Screw
2	4451034	Gasket, Control Panel
3	4449745	4452892 Microcomputer Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: RS675PXGB9, RS675PXGQ9, RS675PXGT9
(Black) (White) (Biscuit)

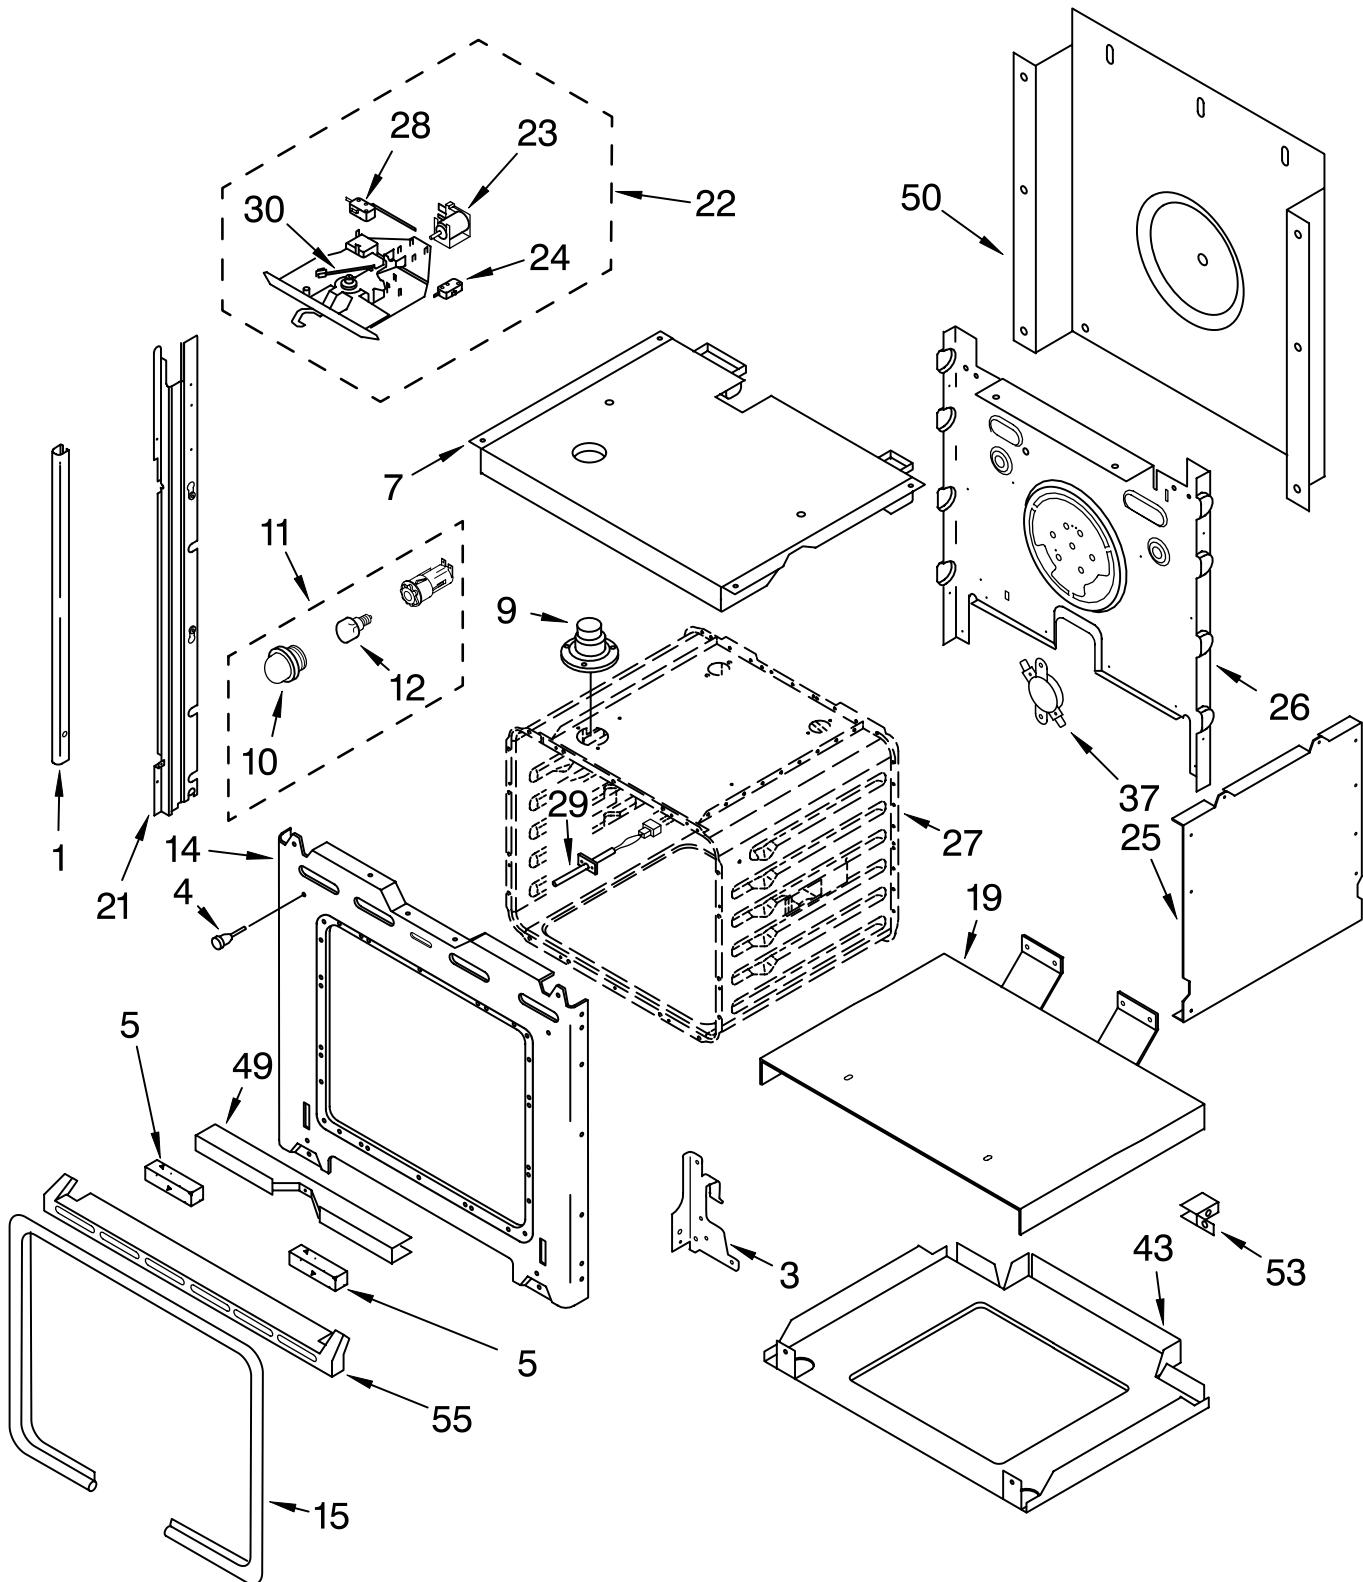

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS


For Models: RS675PXGB9, RS675PXGQ9, RS675PXGT9
 (Black) (White) (Biscuit)

Illus.	Part	No.	DESCRIPTION	Illus.	Part	No.	DESCRIPTION	Illus.	Part	No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.											
1	Trim, Side (Right Hand)			10	4452165	Lens, Light		29	4455636	Sensor	
	4450845	White		11	4452368	Oven Light Assy		4449154	Screw		
	4452120	Biscuit		12	4452166	Bulb, Light		30	4451537	Spring, Latch	
	4450844	Black (Left Hand)		14	4455612	Frame, Front		37	4451442	Thermostat (TOD) (Temp.) SPST	
	4450848	White			4449040	Screw		43	4455530	Base, Chassis	
	4452121	Biscuit			4450118	Nut		49	4448933	Retainer, Gasket	
	4450847	Black		15	4455382	Gasket, Door		4449154	Screw		
	8281236	Screw		19	4451478	Support, Insulation		50	4451747	Cover, Back	
3	Hinge Receiver			4449809	Screw			4449809	Screw		
	4455605	Left Hand		21	4450579	Rail, Side		53	4449845	Support, Bracket	
	4455606	Right Hand			4450580	Right Side		4449809	Screw		
4	4448520	Bumper, Door			4448444	Left Side		4449809	Screw		
5	4452260	Spacer, Foam		22	4449154	Grommet		55	4448478	Trim, Bottom	
7	4455865	Top Chassis		23	4451896	Screw		4452415	White		
	4449809	Screw		24	4452224	Micro Switch N.C.		4448477	Biscuit		
9	4452158	Tube, Vent			4452312	Solenoid			Black		
	3196176	Screw		25	4455641	Side, Chassis (R.H. & L.H.)		FOLLOWING PARTS NOT ILLUSTRATED			
					4449809	Screw					
				26	4452234	Back, Chassis		INSULATION			
					4449809	Screw		4449316	Insulation, Wrap		
				27	4451426	Liner, Oven (Not serviceable)		4450365	Insulation, Back		

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN DOOR PARTS

For Models: RS675PXGB9, RS675PXGQ9, RS675PXGT9
 (Black) (White) (Biscuit)

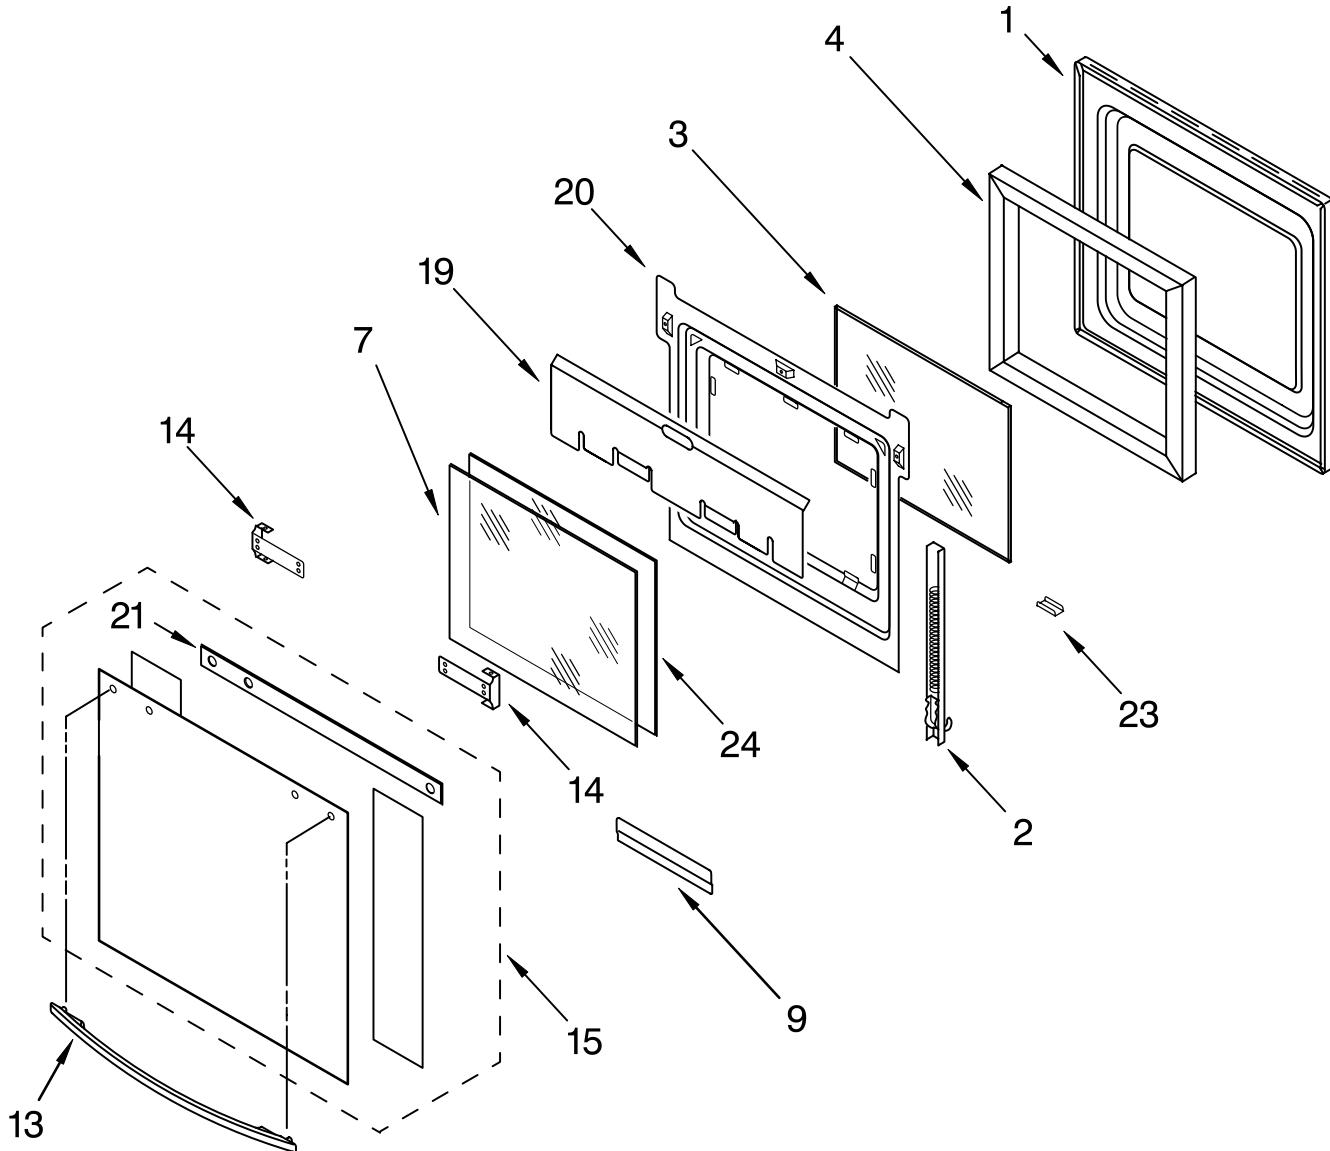


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.	3	4449259	Glass, Inner	15		Door Assembly, Glass
1	4455618	Door Liner	4	4451722	Insulation, Door	4452066		White
2	8300571	Hinge, Door R.Side	7	4449263	Glass, Inner (2)	4452859		Biscuit
	8300572	L.Side	9	4451668	Retainer, Glass	4452065		Black
	4449743	Screw	13	4449809	Screw	19	4450362	Shield, Heat
				4448855	White	4449809		Screw
				4452860	Biscuit	20	8300778	Retainer, Glass
				4448854	Black	4449809		Screw
			14	4450813	Bracket, Handle	21	8300820	Seal, Door Top
				4451040	Screw	23	4450864	Retainer, Clip
							4452119	White
							4450863	Biscuit
							4450863	Black
							4455257	Glass, Inner

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models: RS675PXGB9, RS675PXGQ9, RS675PXGT9
(Black) (White) (Biscuit)

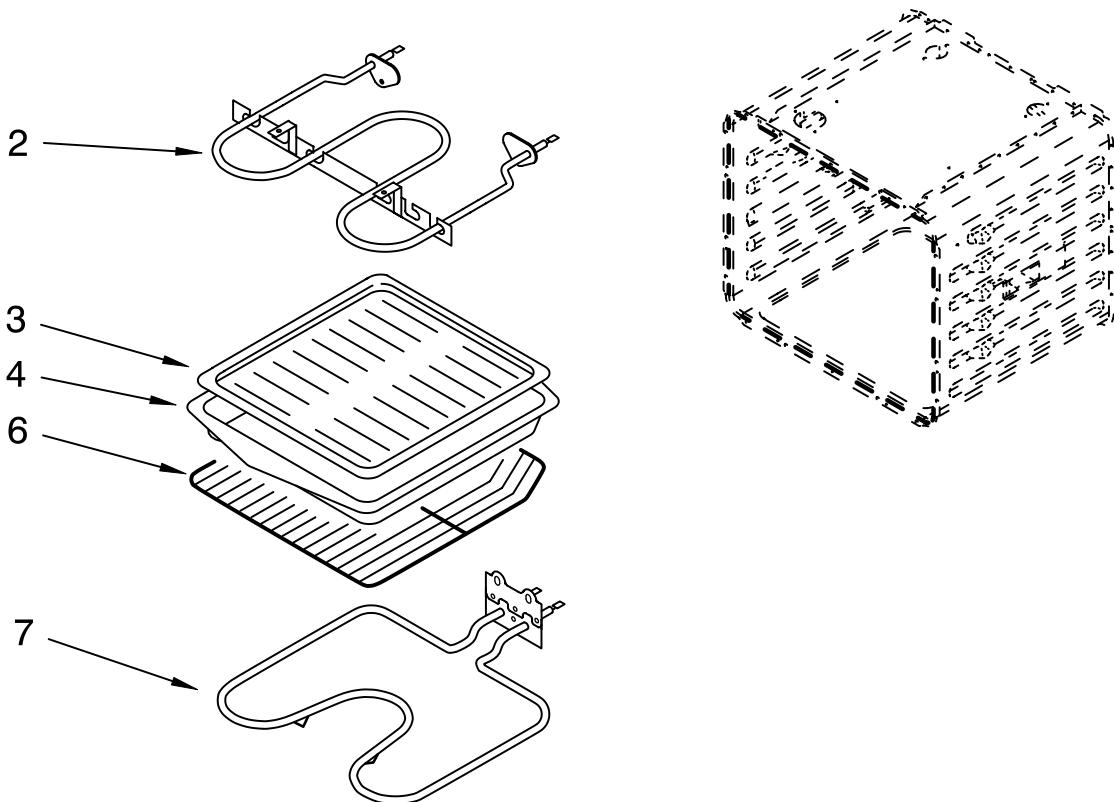


Illus. No.	Part No.	DESCRIPTION
2	4452154	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: RS675PXGB9, RS675PXGQ9, RS675PXGT9
 (Black) (White) (Biscuit)

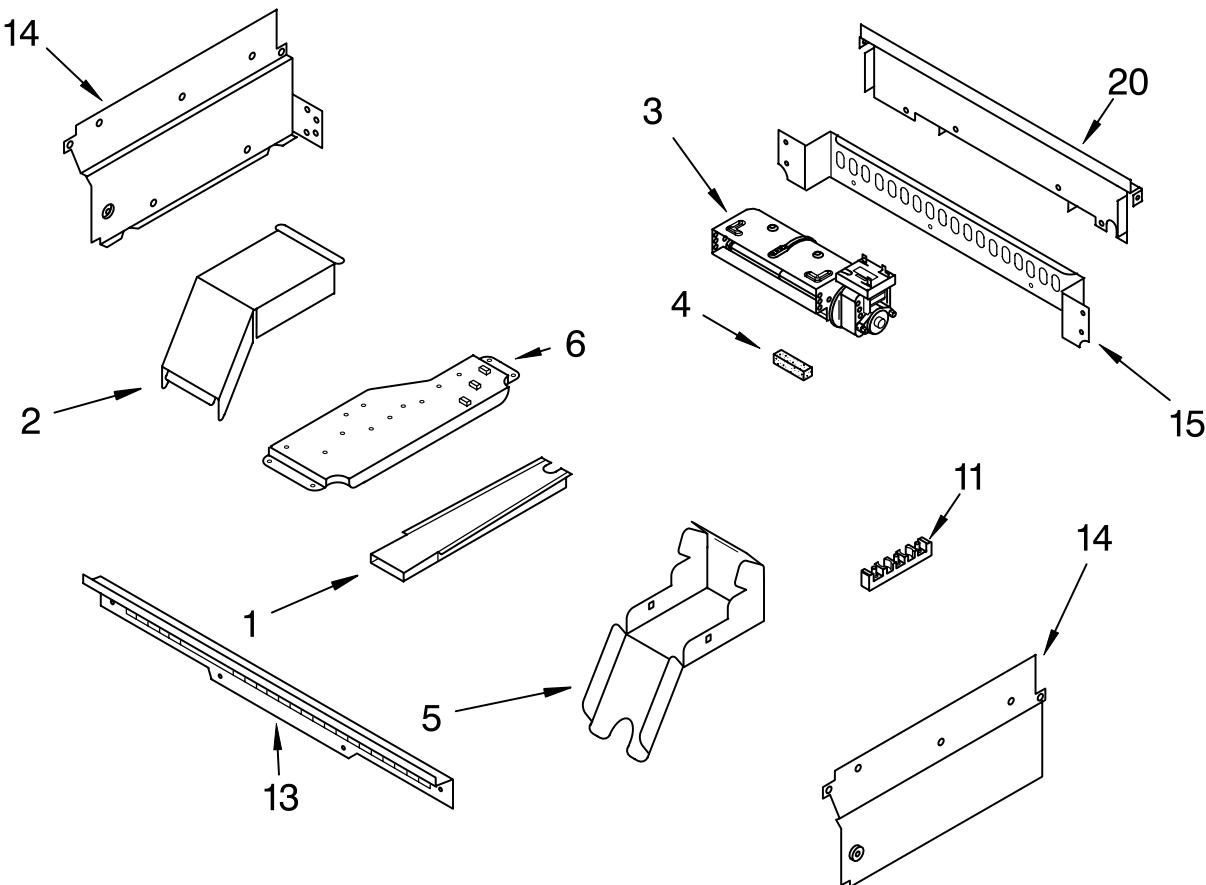

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			2	4455178	Elbow, Vent Top	14		Side, Control Compt.
1	4451759	Vent, Exhaust	3	8300788	Blower	3191832		Right
	4449040	Screw, 8-18 x 3/8	4	4451758	Block, Foam	3191833		Left
			5	4455177	Elbow, Vent Bottom	4449809		Screw
			6	4451761	Plate, Service	15	4452244	Back, Control
			11	4449868	Block, Terminal	4449809		Screw
				3400080	Screw	20	3191842	Cover, Rear
			13	4448549	Vent, (Control Panel)			
				4450038	Screw			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: RS675PXGB9, RS675PXGQ9, RS675PXGT9
 (Black) (White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
<u>PAINT, TOUCH-UP (1/2oz.)</u>			<u>SPLICING WIRES--25FT.</u>			<u>WIRING HARNESS PARTS</u>		
			<u>LENGTH</u>					
	72017	White	242828	Wire (12 Ga. 150 c Black)		3191220	Harness, Wire (Main)	
	261869	Cord Brown	242820	Wire (14 Ga. 150 c Black)		4455733	Harness, Wire (EDC)	
	72032	Black	242821	Wire (14 Ga. 150 c Blue)		4451163	Conduit	
<u>PAINT, SPRAY</u>			242822	Wire (14 Ga. 150 c Brown)		4448664	Clamp	
	350930	White	242830	Wire (14 Ga. 200 c Brown)		4449809	Screw	
	261900	Citrine White	242823	Wire (14 Ga. 150 c Green)		112432	Nut	
	830864	Black	242824	Wire (14 Ga. 150 c Orange)		4450800	Screw, Ground	
<u>ADHESIVE</u>			242829	Wire (12 Ga. 150 c Red)		3192236	Harness, Wire (Infinite Switch)	
	591014	Adhesive Loctite (1/3 oz.)	242825	Wire (14 Ga. 150 c Red)		4455592	Harness, Wire (Light)	
	482338	Sealer, Silastic (3 oz.)	242831	Wire (14 Ga. 200 c Red)		4452222	Spacer, Harness	
			242826	Wire (14 Ga. 150 c White)		4454384	Ground, Wire	
			242827	Wire (14 Ga. 150 c Yellow)		3400015	Screw, Ground	
			242832	Wire (14 Ga. 200 c Yellow)				

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST